


Top Track Guide Installation

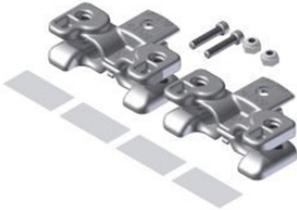

TT1010 - Guide Kit for Outside Slider Under Track



14071-B - Stainless Steel Guide Bottom Piece



14071-T - Stainless Steel Guide Top Piece



H0176 - 10-32 Nylock Nut




33408 - 10-32 x 7/8" Socket Cap Screw




33154 - Galvanic Corrosion 3M Film for Top Track Guide


-
1. Apply the galvanic protection tape to the top and bottom of the end of the tracks.

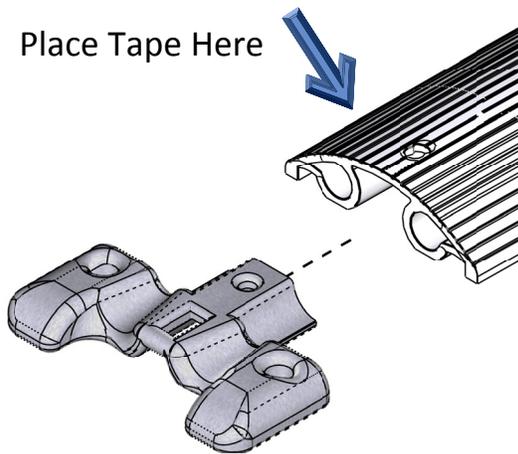


2. Place the nut in the keyed groove. Slide the bottom piece into the center channel of the track.

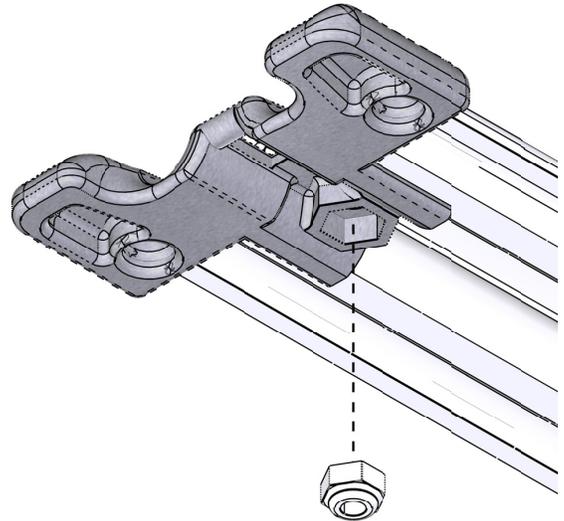


-
3. The top piece guide pivots into the bottom piece to secure the speed guide together.

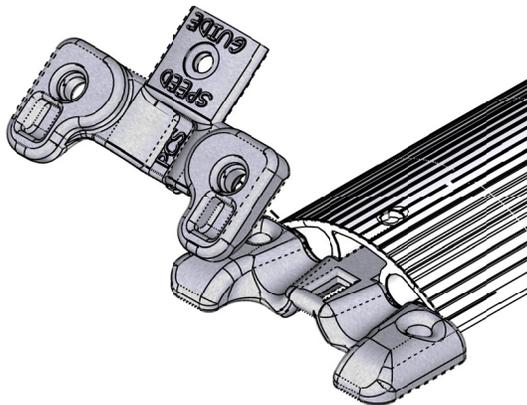

4. Hinge the guide together.

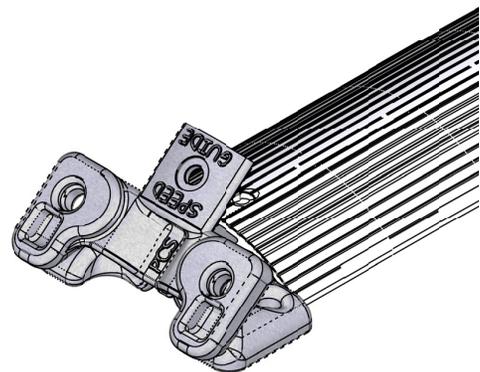

5. Drill a 3/16" hole through the guide mounting hole into the track.

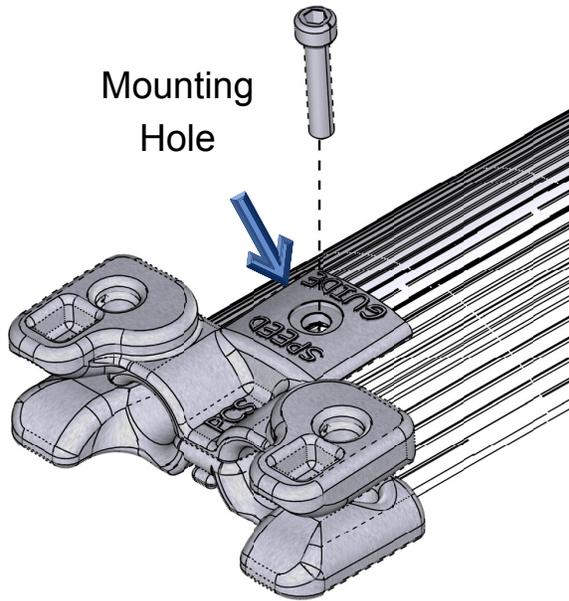

6. Use the 5/16" allen head bolt to secure the guide to the tracks.

